



ANARCHY OUTDOORS

Heckler and Koch Slide Plate Install

Watch the Video of how to assemble this product by going to:


<https://www.youtube.com/watch?v=0oyjJFh8JNQ>

Tools Needed:




5/64" Punch Pin


1. Remove the magazine from the gun. Pull the chamber back and raise the side catch.

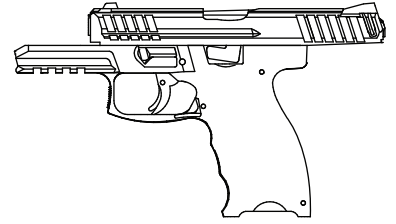


2. Slide the chamber off of the gun.

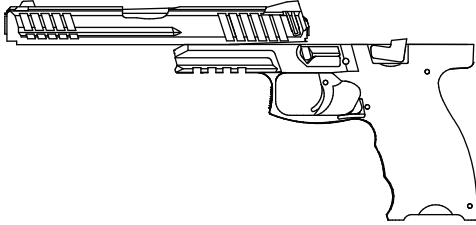

3. Use a pin to pull back the spring that rests against the slide plate. Pull the slide plate up out of the chamber.

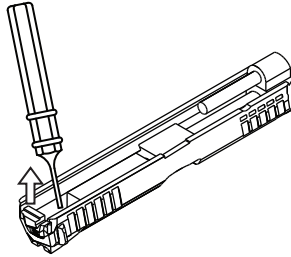

4. Replace the slide plate with the new Anarchy Outdoors slide plate.

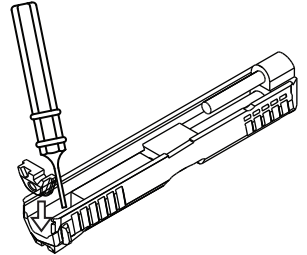

We pride ourselves in our ability to deliver high quality, precision, cutting edge gear for any firearm enthusiast. Enjoy purchasing Anarchy Outdoors products with confidence knowing all Anarchy Outdoors' developed products come with a Lifetime Replacement Guarantee.



We will repair or replace your Anarchy Outdoors product in the event it becomes damaged or defective—at no charge to you. If we cannot repair your product, we will replace it with a product in perfect working order of equal or better physical condition.

The AO Lifetime Guarantee does not cover loss, theft, deliberate damage or cosmetic damage that does not hinder the performance of the product or damage as a result of maintenance provided by someone other than Anarchy Outdoors. The AO Lifetime Guarantee is for "Anarchy Outdoors" branded products and does not cover other brands of products sold by Anarchy Outdoors.

Disclaimer:

Anarchy Outdoors and its owners is not responsible for any damage caused during the assembly of this product. Assemble at your own risk or seek the help of a professional Gunsmith.

Always abide by the established rules for the safe handling of a firearm—keep your finger off the trigger until ready to fire, always keep the muzzle pointed in a safe direction, only point your firearm at something you are willing to damage and be sure of your target and its backstop before firing. Keep your firearm away from and out of the reach of children. Use in this manner could damage the product, lead to an unintentional discharge, and/or cause serious injury or even death.

Because Anarchy Outdoors has no control over how its products will be used, or who they will be used by following their purchase, Anarchy Outdoors and its owners disclaim any and all liability for incidental or consequential damages to people and/or property resulting from any use of Anarchy Outdoors products. The decision to carry a firearm, either for recreation or for personal defense, carries the risk and potential for injury and/or death. Therefore, it is advised that you seek out and acquire proper training before using a firearm or any firearm related product.

All products manufactured and sold by Anarchy Outdoors are sold "as is" and "with all possible faults."

Visit the full Product Liability Disclaimer at anarchyoutdoors.com